


FIG. 3

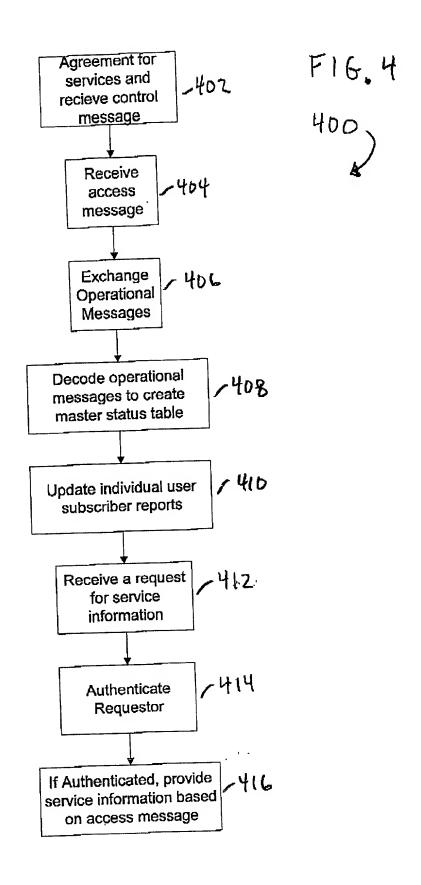

Parameter	Control Message Content	
0	Start of Control Message	
1	Adminstrator Identifier	
2	Service Type Identifier	500
3	Service Provider Identifier しょうしゅう	4
4	Macro Code (001)	
5	Macro Code (003)	
6	Macro Code (004)	
7	510 N/A	
. 8	Macro Code (002)	
9	Macro Code (005)	
1 1 1 1 1		
X	End of Control Message	

F16.5

Parameter	Access Message Content	
0	Start of Access Message	_
1	Adminstrator Identifier	
2	Service Type Identifier	600
3	User Subscriber Identifier	4
4	Macro Code	
5	610 - Macro Code	
6	Macro Code	
7	User Subscriber Identifier	
8	Macro Code	
9	Macro Code	
! 		
X	End of Access Message	
	616	

FIG. 6

Parameter	Operational Message Content	
0	Start of Operational Message	700
1	Adminstrator Identifier	*
2.	Service Type Identifier	
3	Service Provider Identifier	
4	710 Macro Code	
5	Macro Code	
6	712 Subscriber Identifier Subscriber Identifier	
7	Subscriber Identifier	
1		
X	End of Operational Message	
	714)	
	1	

F16.7

F16. 8 804 802 810 Access Messages Service Auminion Land Access Messages Service Admini Data-Service Provider#1 ·Data~ (Administrator) HUB Provider #2 Operational (Administrator)messages Operational messages 1808 806-Operational messages Operational Service Provider messages Service Provider # 1-1 #2-1 Operational messages Network Server Operational messages Service Provider Service Provider #1-N #2-N Business B Busmess A Communication Network User Subscriber #1 User Subscriber #6 User Subscriber #2 User Subscriber #5 User Subscriber #3 User Subscriber #4